



Disassembling Sony CFS-204 Radio Cassette-Corder Outer Casing

Removing the outer casing will allow you to access other important parts of your radio!

Written By: Brittany Patterson



INTRODUCTION

This guide will show you how to open the radio casing to diagnose internal issues and check internal connections.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Batteries



- Press down on the two tabs at the top of the door.
- Rotate the door away from the radio, towards you.
- Lift the door out of the three smaller tabs on the bottom.

⚠ Ensure the radio is turned off to avoid the possibility of electric shock.


ⓘ The battery compartment door is not shown.

Step 2 — Batteries



- Push the batteries against the spring and pull out using your finger to remove them.
- ☑ To insert the new batteries, push the negative end of the 1st battery against a spring and follow the diagram pictured to insert the batteries in the correct orientation.

Step 3 — Screws

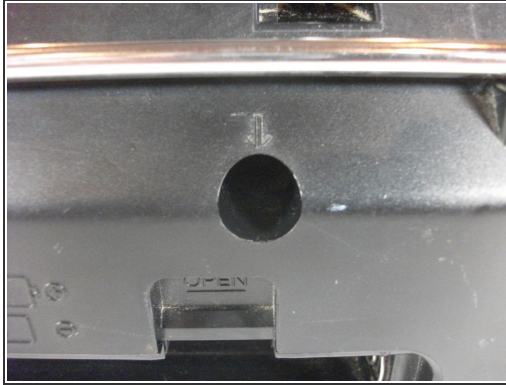

- Remove the 6 screws (30 mm in length) with the Phillips #2 Screwdriver from the large holes marked by arrows on the radio.

Step 4 — Opening



- Press the EJECT button to open the cassette deck.
- ① Pressing this button is required to allow the front face to separate from the case.

Step 5



- Grasp the radio from the front and back halves and gently pull apart to separate them.

Step 6



- Pull the white plug out from the red outlet in the Orange circuit board in the back face of the casing.
- i* Take care not to break the red outlet off the circuit board.
- i* The front and back portions of the casing are now separated from each other.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 09:33:08 PM.